

Believe Beyond Ability

2487 S. Gilbert Road Suite 106 Gilbert AZ 85295



Switch Accessible iPad

What is it?

With the right equipment, you can set up switches to turn pages on an interactive book, advance music in iTunes, and use switch accessible apps.

How it Works?

Connect a blue tooth interface within bluetooth settings.

If the app is switch accessible, go into the settings within the app to select your interface and assign “space” for scan and “enter” for select. Each interface and application is a little different.

If you want to use it iBooks or iTunes, you will need to set up a recipe and assign your switches.


Settings > Accessibility > Switch Control > Recipe

You can select from the menu of premade recipes (turn pages) or create a custom gesture.

We prefer using the Applicator interface setting, set it to single shot, and then set one switch set to mode 5 for “scan,” and mode 6 for “select.”

Once set up, be sure to “launch your recipe.”

“Triple click” on your home button will get you in and out of switch control mode.

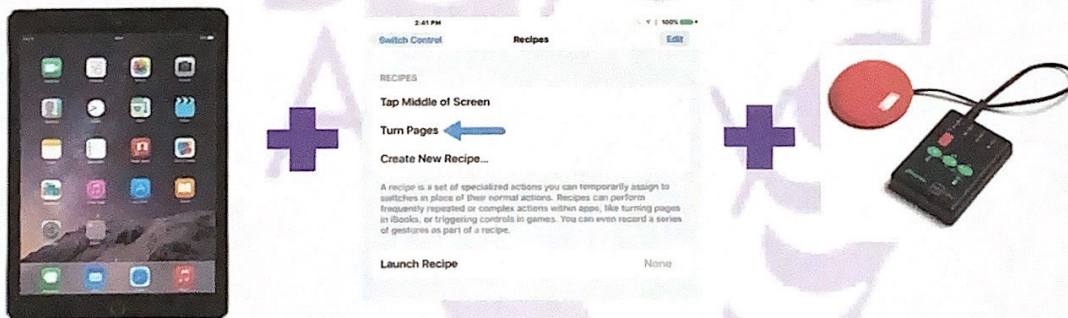

Huh? Call us! We would love to come in person or via Facetime to problem solve with you on how to make your iPad switch accessible to your individual.

Note: There are resources on our website and YouTube videos that will also help you with this set up.